

DIRECTION INDICATORS/HAZARD WARNING LIGHTS DESCRIPTION

The intermittent turn signals and hazard warning lights delimit the entire vehicle perimeter.

The right and left side turn signals are activated by raising or lowering a steering wheel stalk switch.

The hazard warning lights (right and left side indicators operated simultaneously) are activated by means of a red button on the control panel.

The turn signals are ignition-operated but the hazard warning lights can always be operated for safety reasons because they are supplied directly by the battery.

The turn signal and hazard warning light circuits are protected by two different fuses.

Two warning lights on the instrument panel, also intermittent, indicate activation of the right and left indicators. They come on simultaneously if the hazard warning lights are activated.

DIRECTION INDICATORS/HAZARD WARNING LIGHTS OPERATIONAL DESCRIPTION

The circuit is controlled from control panel H090, which receives a turn signal activation signal from stalk unit H005 (at pins 4 and 5 of connector A) and hazard warning light control switch built into the control panel.

Stalk unit H005 supplies an earth signal C015 to control panel H090.

Once the turn signal control is operated, control panel H090 supplies the turn signals as appropriate.

- left front headlamp F010 from pin 6 of connector B;
- right front headlamp F011 from pin 12 of connector B;
- left tail-light F030 from pin 19 of connector B;
- right tail-light F031 from pin 15 of connector B;
- left side turn signal F020 from pin 20 of connector B;
- right side turn signal F021 from pin 14 of connector B;

Simultaneously, control panel H090 turns on warning lights on control panel E050 via pins 13 and 18 of connector B.

The red led in the switch comes on intermittently when the switch on control unit H090 is pressed.

Control panel H090 is supplied via the ignition and also directly from the battery at pin 18 of connector D (INT) and pin 17 of connector B respectively from under-facia junction unit B002.

The direct power supply is protected by fuse F01, located in engine bay junction unit B001, and another fuse F53, housed in the junction unit under the instrument facia B002. The ignition-operated supply is protected by fuse F37, housed in the junction unit under instrument facia B002.

DIRECTION INDICATORS/HAZARD WARNING LIGHTS WIRING DIAGRAM

Component code	Description
B001	JUNCTION UNIT
B002	JUNCTION UNIT UNDER DASHBOARD
B099	MAXI FUSE BOX ON BATTERY
C010	LEFT FRONT EARTH
C015	DASHBOARD EARTH, DRIVER'S SIDE
C030	LEFT REAR EARTH
C031	RIGHT REAR EARTH
C080	RIGHT REAR LIGHT CLUSTER EARTH
C081	LEFT REAR LIGHT CLUSTER EARTH
D001	FRONT/DASHBOARD COUPLING
D025	DASHBOARD/LEFT REAR COUPLING
D026	DASHBOARD/RIGHT REAR COUPLING
D097	SHORT CIRCUITING COUPLING
E050	INSTRUMENT PANEL
F010	LEFT HEADLAMP
F011	RIGHT HEADLAMP
F020	LEFT SIDE REPEATER
F021	RIGHT SIDE REPEATER
F030	LEFT REAR LIGHT CLUSTER
F031	RIGHT REAR LIGHT CLUSTER
H005	STEERING COLUMN SWITCH UNIT
H090	SWITCH CONTROL PANEL

DIRECTION INDICATORS/HAZARD WARNING LIGHTS LOCATION COMPONENTS

Component code	Description
B001	JUNCTION UNIT
B002	JUNCTION UNIT UNDER DASHBOARD
B099	MAXI FUSE BOX ON BATTERY
C010	LEFT FRONT EARTH
C015	DASHBOARD EARTH, DRIVER'S SIDE
C030	LEFT REAR EARTH
C031	RIGHT REAR EARTH
C080	RIGHT REAR LIGHT CLUSTER EARTH
C081	LEFT REAR LIGHT CLUSTER EARTH
D001	FRONT/DASHBOARD COUPLING
D025	DASHBOARD/LEFT REAR COUPLING
D026	DASHBOARD/RIGHT REAR COUPLING
D097	SHORT CIRCUITING COUPLING
E050	INSTRUMENT PANEL
F010	LEFT HEADLAMP
F011	RIGHT HEADLAMP
F020	LEFT SIDE REPEATER
F021	RIGHT SIDE REPEATER
F030	LEFT REAR LIGHT CLUSTER
F031	RIGHT REAR LIGHT CLUSTER
H005	STEERING COLUMN SWITCH UNIT
H090	SWITCH CONTROL PANEL

